



W | 4

REEL MANUAL

INTRODUCTION

Congratulations on the purchase of your new Westin spinning reel. Designed by anglers for anglers, this spinning reel utilises a blend of proven and state-of-the-art technology to provide smooth, efficient, and reliable performance. Each Westin reel is constructed to last with high quality components designed to give years of service.

Features and benefits found on the Westin reel are highlighted on the box and in detail on the website. The entire company would like to thank you for selecting a Westin reel as your reel of choice. We are confident that your reel will perform for many years.

WARRANTY

As we are confident about the quality of the Westin reels, they are covered by a limited warranty against defects in workmanship and materials for a period of up to 5-years, dependent upon the specific model purchased and the warranty period provided with it. Should damage occur due to a manufacturer's defect, Westin will, at the company's discretion, replace the product at no charge. This warranty is only valid to the original owner and does not extend to products purchased for commercial or rental applications. To determine the correct warranty period, the receipt needs to be handed over when a claim occurs. The Westin reels are developed for usage in freshwater and in saltwater.


CARE AND LUBRICATION

Your Westin reel is quality manufactured for maximum durability. Like any other precision-made piece of equipment, reasonable care will ensure peak performance and longevity. After each fishing trip, the reel should be cleaned with a soap solution and fresh water, preferably warm, to remove any accumulated salt and mineral deposits. Do not wash the reel with water under pressure as this will force salt deposits and/or sand into the reel. A very fine spray will help dissolve the salt on the external parts of the reel and rinse it clean. Dry excess moisture from the reel and then sparingly lubricate all exposed areas. Your reel should be stored in a cool, dry place. Do not store in a plastic bag, as condensation may develop. Periodically examine your reel and tighten loose screws and fittings.

HOW TO BALANCE YOUR LINELAY WITH THE ADDED WASHERS



TOP OF THE SPOOL HOLDS MORE LINE THAN THE BOTTOM WITH A GROOVE. THE SPOOL IS SITTING TOO LOW ON THE MAIN SHAFT. TO COUNTER ADD A WASHER.

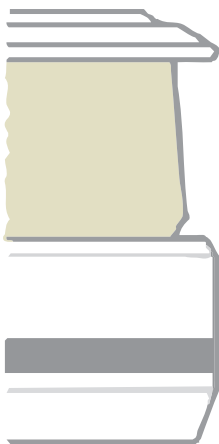

BOTTOM OF THE SPOOL HOLDS MORE LINE THAN THE TOP WITH A GROOVE. THE SPOOL IS SITTING TOO HIGH ON THE MAIN SHAFT. TO COUNTER REMOVE A WASHER.

Fairpoint Outdoors A/S,
Gydevang 4
3450 Allerød,
Denmark